










 









 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/Rec/Instant		Red
	Green/Left-Left		Green
	Yellow/Stop		Yellow
	Blue/play		Blue
	White/Right-Right		Right-Right
	Right-Right		D. Menu
	[]		Guide
	[o]/Timer		Sleep
	[?]		Eject
	[♦]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	[> <]		Subt
	[1 2]		3D
	[]→		AV
	♪ Smart		Smart
	[] Smart		Media
	[<>]		Back
	[-o-]/Active Control		Options





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		SLEEP		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Originalfernbedienung Ersatzfernbedienung

	[> <]		Subt
	[1 2]		3D
	[]→		AV
	♪ Smart		Smart
	[] Smart		Media
	[<>]		Back
	[-o-]/Active Control		Options

Originalfernbedienung Ersatzfernbedienung

