



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Sleep		Sleep
	Clock/Timer		Shift + AV
	Set		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide
	+10		Pre Ch
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Top Menu		Shift + Menu
	On Screen		Shift + Options
	Cancel		Exit
	Audio		Dual
	Return		Back
	Subtitle		Subt
	Angle		List
	VFP		Shift + Dual
	Zoom		Eject
	DVD Level		D. Menu
	Progressive		Shift + Smart
	FM Mode		Smart
	A.Standby		Shift + Power
	Setup		Options
	Up		Up
	Down		Down
	Right		Right



 
 

 

 


 

 
 




Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Left		Left
	Play DVD/CD		Play
	FM/AM		Green
	AUX		Red
	Stop		Stop
	3D Phonic		3D
	Pause		Pause
	Repeat		Text
	Repeat A-B		Shift + Text
	Play Mode		Shift + Play
	I<<		I<<
	>>I		>>I
	I<< Group/Title		Ch -
	Group/Title >>I		Ch +
	<</Slow-		<<
	>>/Slow+		>>

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Fade Muting		Mute
	Bass/Treble		AV
	Rhythm AX		Format
	PTY Select+		Shift + Right
	Dimmer		Blue
	PTY Select-		Shift + Left
	RDS Display		Yellow
	Display		Info
	TA/News/Info		Shift + Info
	PTY Search		TV/R
	Recall		Shift + Pre Ch

