



 
 






 
 
 
 
 
 



 


 


 
 
 


 

 

 
 

 
 


 
 

 

 

 
 
 
 

 


 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Exit		Exit
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Audio / I/II		Dual
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Q.Menu		D. Menu
	Back		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	EPG		Guide
	YouTube		Media
	Vol +		Vol +
	Vol -		Vol -
	Source		AV
	Text		Text
	P +		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	P -		Ch -				
	List		List				
	Netflix		Smart				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	<<		<<				
	<<		<<				
	>>		>>				
	>>		>>				




 
 


 



 



 

 

 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play		Play
	Pause / Mix		Pause
	Pause / Mix		Shift + Text
	Stop / Hold		Stop
	Size		Format
	<< / Timer		<<
	<< / Timer		Shift + Power
	I<< / Index		I<<
	>>I / Reveal		>>I
	>> / Cancel		>>
	>> / Cancel		Shift + Exit
	Info		Info
	Audio / I/II		Dual
	Text		Text
	Back / Del		Back

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Settings		Options
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Netflix		Media				
	Vol +		Vol +				
	Vol -		Vol -				
	YouTube		Shift + Media				
	Home / Source		AV				
	Home / Source		Smart				
	P +		Ch +				
	P -		Ch -				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	EPG		Guide				
	List		List				
	Q.Menu		Menu				

