


 


 

 




 

 




 





 
 

 




 
 

 
 
 
 

 
 
 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Guide		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	>>I		>>I
	I<<		I<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	Menu		Menu
	Back		Back
	Red/Text		Red
	Green/Audio		Green
	Yellow/Sub		Yellow
	Blue/Find		Blue
	<<		<<
	Play		Play
	Pause		Pause





Originalfernbedienung   Ersatzfernbedienung

	>>		>>
	Stop		Stop
	Rec		Rec
	PVR		Smart
	FAV		Pre Ch
	[+]/Ratio		3D
	Page Up		Shift + Up
	Page Down		Shift + Down
	[v]/Edit		Media
	F1/Tv/Radio		TV/R
	F2/Input		AV
	F3		Subt
	F4		Options

Originalfernbedienung   Ersatzfernbedienung