



 


 

 



 





 

 
 


 

 


 








 

 

 

 

 

 
 



 
 







Originalfernbedienung Ersatzfernbedienung

|   |          |   |        |
|---|----------|---|--------|
|    | Standby  |    | Power  |
|    | Mute     |    | Mute   |
|    | 1        |    | 1      |
|    | 2        |    | 2      |
|    | 3        |    | 3      |
|    | 4        |    | 4      |
|    | 5        |    | 5      |
|    | 6        |    | 6      |
|    | 7        |    | 7      |
|    | 8        |    | 8      |
|   | 9        |   | 9      |
|  | 0        |  | 0      |
|  | FAV      |  | Pre Ch |
|  | Audio    |  | Dual   |
|  | Recall   |  | Back   |
|  | Subtitle |  | Subt   |
|  | Info     |  | Info   |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |        |
|---|--------|---|--------|
|    | Menu   |    | Menu   |
|    | EPG    |    | Guide  |
|    | Exit   |    | Exit   |
|    | CH+    |    | Ch +   |
|    | CH-    |    | Ch -   |
|    | Up     |    | Up     |
|    | Down   |    | Down   |
|    | Right  |    | Right  |
|    | Left   |    | Left   |
|    | OK     |    | Ok     |
|   | Vol+   |   | Vol +  |
|  | Vol-   |  | Vol -  |
|  | Text   |  | Text   |
|  | Red    |  | Red    |
|  | Green  |  | Green  |
|  | Yellow |  | Yellow |
|  | Blue   |  | Blue   |





Originalfernbedienung    Ersatzfernbedienung

|  |          |  |       |
|--|----------|--|-------|
|  | Rec List |  | List  |
|  | Tv/Radio |  | TV/R  |
|  | Stop     |  | Stop  |
|  | Pause    |  | Pause |
|  | <<       |  | <<    |
|  | >>       |  | >>    |
|  | Record   |  | Rec   |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |
|  |          |  |       |

Originalfernbedienung    Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

