











Originalfernbedienung    Ersatzfernbedienung

|   |        |   |                   |
|---|--------|---|-------------------|
|    | Mute   |    | Mute / Dimmer     |
|    | P100   |    | Fav / Marker / PC |
|    | Power  |    | Power             |
|    | Reveal |    | Info / Angle      |
|    | Double |    | Smart / List      |
|    | 1      |    | 1                 |
|    | 2      |    | 2                 |
|    | 3      |    | 3                 |
|    | Hold   |    | Stop / Hold       |
|    | 4      |    | 4                 |
|   | 5      |   | 5                 |
|  | 6      |  | 6                 |
|  | SUB    |  | Subtitle / EQ     |
|  | 7      |  | 7                 |
|  | 8      |  | 8                 |
|  | 9      |  | 9                 |
|  | Update |  | Display / Media   |









 





 

Originalfernbedienung    Ersatzfernbedienung

|   |       |   |                    |
|---|-------|---|--------------------|
|    | AV    |    | AV / Input / RDS   |
|    | 0     |    | 0                  |
|    | -/--  |    | Guide / EPG / -/-- |
|    | Mix   |    | Shift + Text /     |
|    | TV/TX |    | Text / Goto        |
|    | PR+   |    | CH+ / Page+        |
|    | Up    |    | Up                 |
|    | Menu  |    | Menu / Home        |
|    | Left  |    | Left               |
|    | Vol-  |    | Vol-               |
|   | OK    |   | OK                 |
|  | Right |  | Right              |
|  | Vol+  |  | Vol+               |
|  | Swap  |  | Back / Return      |
|  | PR-   |  | CH- / Page-        |
|  | Down  |  | Down               |
|  | 16:9  |  | Setup / OPT /      |





Originalfernbedienung    Ersatzfernbedienung    Originalfernbedienung    Ersatzfernbedienung

|   |                |   |                             |
|---|----------------|---|-----------------------------|
|  | Red            |  | Red / Netflix / Search      |
|  | Green          |  | Green / APP / Repeat        |
|  | Yellow / Timer |  | Yellow / YouTube / Repeat   |
|  | Blue           |  | Blue / Prime Video / Random |
|  | Violet         |  | Shift + Red / Netflix /     |
|  | Picture        |  | Picture / Format            |
|  | ♪              |  | Sound / Title               |
|  | PP             |  | Exit / Cancel / Clear       |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

