







 






 









 




 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Nicam/A2		Shift + Audio / Lang I/II
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Media		Shift + Display / Media
	Display		Display / Media
	Auto		Smart / List
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	DTV		D.Menu / Top
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	CH+		CH+ / Page+
	Info		Info / Angle
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /
	Vol-		Vol-
	Text		Text / Goto
	EPG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Index		Setup / OPT /
	<</Hold		<< / Tune-
	<</Hold		Shift +
	Size		Stop /
	>>		Zoom / Size
	>>		>> / Tune+
	I<</Reveal		I<< / Preset-
	>>I/Subpage		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Rec/Repeat		Rec / Rec Mode
	Rec/Repeat		Shift +
	T-Shift		Green / APP / Repeat
	T-Shift		Repeat
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Repeat
	Cyan		Yellow / YouTube / Repeat
			Blue / Prime Video / Random

