 

 

 





 

 



 





 

 

 

 









## Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Rec PVR		Rec / Rec Mode
	List PVR		Smart / List
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	TTX		Text / Goto
	Audio		Audio / Lang I/II
	DTV/VCR		AV / Input / RDS
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	CH+		CH+ / Page+
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK

## Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol+
	Favourite		Fav / Marker / PC
	CH-		CH- / Page-
	Down		Down
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Goto		Shift + Text /
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	<<		<< / Tune-
	>>		>> / Tune+
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	RPT		Shift + Green / APP / APP /
	Red/Zoom		Zoom / Size
	Red/Zoom		Red / Netflix / Search
	Green/←		Green / APP / Repeat
	Yellow/→		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung



 

 

 







 

 



 

 





 
 
 










## Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Rec PVR		Rec / Rec Mode
	List PVR		Smart / List
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	TTX		Text / Goto
	Audio		Audio / Lang I/II
	DTV/VCR		AV / Input / RDS
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	CH+		CH+ / Page+
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK

## Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol+
	Favourite		Fav / Marker / PC
	CH-		CH- / Page-
	Down		Down
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Goto		Shift + Text /
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	RPT		Shift + Green / APP /
	Red/Zoom		Zoom / Size
	Red/Zoom		Red / Netflix / Search
	Green/←		Green / APP / Repeat
	Yellow/→		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung