

 
 
 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	Recall/Program		Back
	List/+10		List
	Vol+		Vol +
	Vol-		Vol -
	Info/Display		Info

Originalfernbedienung Ersatzfernbedienung

	Zoom/Aspect		3D
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Sleep		Sleep
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Red		Red
	Green/R.List		Green
	Yellow/T.List/Title		Yellow
	Blue/D.Display		Blue
	D.Setup		Smart



