
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display		Info
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Subtitle		Subt
	Sleep		Sleep
	P.Size		Format
	Nicam/A2		Options
	Auto		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Recall		Guide
	Recall		Back
	I<< USB		I<<
	>>I USB		>>I
	<< USB		<<
	>> USB		>>
	Media USB		Media
	Play USB		Play
	Pause USB		Pause
	Stop USB		Stop
	Rec/PVR USB		Rec
	Vol+ USB		Shift + Right
	Vol- USB		Shift + Left
	FAV		Pre Ch





Originalfernbedienung Ersatzfernbedienung

	FAV+		Shift + Ch +
	FAV-		Shift + Ch -
	Menu		Menu
	Exit		Exit
	TV/AV		AV
	EPG		Shift + Guide
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	Hold		Eject
	Audio		Dual
	Index		List
	Subpage		Shift + Subt
	Reveal		Smart
	Size		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue

