





 

 

 








 




 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Standby		Shift + Power
	TV Input		AV / Input / RDS
	TV Vol +		Shift + Vol+
	TV Mute		Shift + Mute / Dimmer
	TV CH +		Shift + CH+ /
	TV Vol -		Shift + Vol-
	TV CH -		Shift + CH- /
	Audio		Audio / Lang I/II
	SUB-T		Subtitle / EQ
	TV / STB		Shift + TV/Radio / Program
	TV / Radio		TV/Radio /
	Mute		Mute / Dimmer
	Text		Text / Goto
	Sleep		Sleep / Timer
	Voltar		Setup / OPT /
	Guia TV		Shift + Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	VOD		Shift + Audio / Lang I/II
	Vol +		Vol+
	Up		Up
	CH +		CH+ / Page+
	Vol -		Vol-
	Left		Left
	OK		OK
	Right		Right
	CH -		CH- / Page-
	Down		Down
	Menu		Menu / Home
	Lista Gravacoes		Smart / List
	Lista Gravacoes		Shift + Smart / List
	Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold







Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Red /  <	 + 	Shift + Red / Netflix /
	Red /  <		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow /  i	 + 	Shift + Yellow / YouTube /
	Yellow /  i		Yellow / YouTube / Repeat
	Blue / >	 + 	Shift + Blue / Prime
	Blue / >		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	*		Guide / EPG / -/--
	0		0
# button" data-bbox="506 317 539 350"/>	#		Fav / Marker / PC

