




































 
 

 
















 








 


 


 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------------|
|  | Power |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Tuner/Band |  +  | Shift + 6 |
|  | Auto/Mono |  | Audio / Lang I/II |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Disc |  | D.Menu / Top |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | >10 |  | Guide / EPG / -/-- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Display Mode |  | Display / Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|------------------------|
|  | PTY Select |  | Setup / OPT / |
|  | Search |  | Red / Netflix / Search |
|  | CD |  +  | Shift + 3 |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Program |  | TV/Radio / |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Cancel |  | Exit / Cancel / Clear |
|  | Tape |  +  | Shift + 5 |
|  | << Tape |  | << / Tune- |
|  | >> Tape |  | >> / Tune+ |
|  | Rec/Pause |  | Rec / Rec Mode |
|  | < Tape |  +  | Shift + << / |
|  | Stop Tape |  +  | Shift + Stop / |
|  | Tape > |  +  | Shift + >> / Tune+ |

Tune+



