







 
 
 






 
 




 





 



 


 
 
 




 

 

 
 
 
 

 
 
 







 



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	Vol+		Vol +
	Vol-		Vol -
	F		Menu
	Mute		Mute
	Preset/Folder Up		Ch +
	Prset/Folder Down		Ch -
	Jukebox/Memor		Red
	Auto Dj		Green
	Delete		Blue
	Repeat		Text
	Stop		Stop
	>>I/Tuning+		>>I
	I<</Tuning-		I<<
	Play / Pause		Pause
	Play / Pause		Play

 



**Originalfernbedienung Ersatzfernbedienung**

	Equalizer		Options
	Special EQ		Dual
	( i )		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clock		Shift + AV
	Alarm		Smart
	Voice Cancellor		Yellow
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

	RDS/Set		Media
	Key Changer #		TV/R
	Key Changer b		3D
	Mic Echo		Subt
	PTY		AV
	Vocal Effects		Format
	USB Rec		Rec

Originalfernbedienung Ersatzfernbedienung