 





 

 

 





 

 



 





 

 

 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	Sleep		Sleep / Timer
	4		4
	5		5
	6		6
	Still		Eject / Surround
	7		7
	8		8
	9		9
	Aspect		Zoom / Size
	-/--		Guide / EPG / -/--
	0		0
	Prev. Ch.		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Vol -		Vol-
	Vol +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Info		Info / Angle
	Nicam/A2 / Audio		Audio / Lang I/II
	Auto		Setup / OPT /
	P.Mode		Picture / Format
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	S.Mode		Sound / Title
	Down		Down
	Exit		Exit / Cancel / Clear











Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	I<< / Index		I<< / Preset-
	>>I / Cancel		>>I / Preset+
	<< / Reveal		<< / Tune-
	>> / Hold		>> / Tune+
	Txt		Text / Goto
	Play/Pause / Size		Play / Slow
	Play/Pause / Size		Pause / Step / Freeze
	Stop / Subpage		Stop / Hold
	Subtitle		Subtitle / EQ
	Rec Menu		Shift + Rec / Rec Mode
	CH List		Smart / List
	FAV		Fav / Marker / PC
	USB		Shift + 8

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	DTV / Radio		TV/Radio /
	DTV		D.Menu / Top
	REC / Repeat		Rec / Rec Mode

