






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Anyview Cast		Shift + Up
	Anyview Cast Off		Shift + Down
	TV		TV/Radio /
	Source		AV / Input / RDS
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	DMP		Display / Media
	Pause		Pause / Step / Freeze
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	HiSmart		Smart / List
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	CH.List		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	CH-		CH- / Page-





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
1	1	TV	1	TEXT	Text	GOTO	Text / Goto
2	2	DVD	2	INDEX	Index	TOP MENU	D.Menu / Top
3	3	CD - STB	3	SUB PAGE	Subpage	OPT-TOOLS	Setup / OPT /
4	4	VIDEO	4				
5	5	TAPE	5				
6	6	TUNER	6				
7	7	AUX - HDD	7				
8	8	USB	8				
9	9	BLUETOOTH	9				
INFO	Info	ANGLE	Info / Angle				
0	0	HDMI - BAT	0				
PRE CH	PRE-CH	RETURN	Back / Return				
I/II LANG.	Lang/I-II	LANG I/II	Audio / Lang I/II				
P.MODE	P.Mode	FORMAT PICTURE	Picture / Format				
S.MODE	S.Mode	TITLE SOUND	Sound / Title				
SIZE	Size	SIZE ZOOM	Zoom / Size				
SUBT.	Subt.	EQ SUBTITLE	Subtitle / EQ				

