











 


 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	Recall / Mouse		Back
	P.Mode		Format
	S.Mode		Dual
	Nicam / A2		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Source		AV
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Info		Info
	Home		Smart
	FAV		Pre Ch
	Settings		Options
	ASP		List
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu



 





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	I<< / Text		I<<
	I<< / Text		Text
	>>I / Subpage		>>I
	<< / Size		<<
	>> / Reveal		>>
	Play/Pause / Index		Play
	Play/Pause / Index		Pause
	Stop / Hold		Stop
	Cancel	 + 	Shift + Exit
	Subtitle		Subt
	Repeat	 + 	Shift + Text
	Auto		3D
	A - B		Eject
	Media		Media
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue

