



 

 


 
 

 


 

 
 
 

 

 
 
 
 
 



 

 



**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	*		Menu
	Search		TV/R
	[<>]		Format
	Tv Guide		Guide
	List		List
	Sources		AV
	Smart Tv		Media
	Home		Smart
	Tv/Exit		Exit
	Red		Red

**Originalfernbedienung   Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info
	Options		Options
	Back		Back
	Multiview		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -





**Originalfernbedienung Ersatzfernbedienung**

1 . @	1	1	1
2 ABC	2	2	2
DEF 3	3	3	3
4 GHI	4	4	4
5 JKL	5	5	5
MNO 6	6	6	6
7 PQRS	7	7	7
8 TUV	8	8	8
WXYZ 9	9	9	9
0 _	0	0	0
SUBTITLE	Subtitle	AD SUBT	Subt
TEXT	Text	REPEAT TEXT	Text

**Originalfernbedienung Ersatzfernbedienung**