



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject
	Mute		Mute
	OSD		Smart
	Step		Shift + Pause
	Recover		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit
	Setup		Options
	Search		TV/R
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Subtitle		Subt
	Audio		Dual
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	Angle		Format
	Zoom		Shift + Eject
	3D		3D
	Prog		Sleep
	Title		Info
	Repeat		Text
	A-B		Shift + Text
	Slow		Shift + Play
	Menu		Menu
	N/P		List
	Vol -		Vol -
	Vol +		Vol +
	PS		Yellow
	Audio Up		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

