 

 

 
 
 


 

 
 

 

 
 

 
 
 
 
 

 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject/Auto		Eject
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

 
 
 

 
 
 
 
 
 
 


 
 

 

 
 
 


 

 
 

 

 



Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Audio		Dual
	CH+		Ch +
	CH-		Ch -
	Display		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	LCD Menu		Menu
	DVD Setup/Exit		Exit
	DVD Setup/Exit		Options
	Input		AV
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	Sleep		Sleep





Originalfernbedienung    Ersatzfernbedienung

	FAV		Shift + Pre Ch
	FAV-		Shift + Ch -
	FAV+		Shift + Ch +
	EPG		Guide
	Angle/Text		Text
	Zoom/Hold		Shift + Eject
	Tv/Radio		TV/R
	Goto/Subpage		3D
	D.Disp/Reveal		List
	Subtitle		Subt
	Title/Size		Smart
	D.Menu/Index		D. Menu
	I>/Media		Media
	Play/Pause		Play
	<<		<<
	Play/Pause		Pause
	>>		>>

Originalfernbedienung    Ersatzfernbedienung

	Rec		Rec
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Red/Prog		Red
	Green/Intro		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue

