



 

 

 

 



 

 

 







 



 
 










 

















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer




**Originalfernbedienung    Ersatzfernbedienung**

	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down



 





**Originalfernbedienung   Ersatzfernbedienung**

	Display		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Guide		<< / Tune-
	<< / Guide		Guide / EPG / -/--
	Play/Pause / Timeshift		Play / Slow
	>> / Aspect		>> / Tune+
	I<< / Cancel		I<< / Preset-
	>>I / Subpage		>>I / Preset+
	Stop / Index		Info / Angle
	Stop / Index		Stop / Hold
	TV / Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Reveal		Setup / OPT /
	Size		Zoom / Size

**Originalfernbedienung   Ersatzfernbedienung**

	Hold		Shift + Stop /
	Text		Text / Goto

