





 






| Originalfernbedienung | Ersatzfernbedienung |
|--|--|
|  Rec Pause |  Pause |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  EPG |  Guide |
|  AV Out/AV In |  AV |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Tv/Radio |  TV/R |
|  Recall |  Pre Ch |

| Originalfernbedienung | Ersatzfernbedienung |
|--|---|
|  Subt |  Subt |
|  TTX |  Text |
|  Audio |  Dual |
|  Menu |  Menu |
|  Exit |  Exit |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Mode |  Smart |
|  Rec List |  List |
|  Zoom |  Eject |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Play/Pause |  Play |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | Rec | | Rec |
| | Stop | | Stop |
| | <</FAV | | << |
| | >>/Info | | >> |
| | Red | | Red |
| | Green | | Green |
| | Yellow | | Yellow |
| | Blue | | Blue |

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

