



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	16:9		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	TV		Shift + 1
	Up / P+		Shift + Up
	Up / P+		Up
	AV		AV / Input / RDS
	Left / V-		Left
	Left / V-		Shift + Left
	Menu		Menu / Home
	Menu		Shift + Menu /
	Right / V+		Right
	Right / V+		Shift + Right
	S / M / D		Exit / Cancel / Clear
	Down / P-		Shift + Down
	Down / P-		Down
	Recall		Back / Return
	Recall		Shift + Back / Return
	i		Info / Angle
	≡0		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	≡i	SHIFT + ANGLE INFO	Shift + Info / Angle
	PP	TITLE SOUND	Sound / Title
	≡	GOTO TEXT	Text / Goto
	/≡	OPT-TOOLS SETUP	Setup / OPT /
	Hold	HOLD	Stop / Hold
	Size	SIZE ZOOM	Zoom / Size
	≡X	TIMER SLEEP	Sleep / Timer
	≡?	TOP MENU D.MENU	D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

