


 
 

 



 
 
 
 

 



 

 



 


 
 






 
 






 
 
 
 



 





 





 








Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Red/F1		Red
	Green/F2		Green
	Yellow/F3		Yellow
	Blue/F4		Blue
	Text		Text
	Subtitle		Subt
	FAV		Pre Ch
	Menu		Menu
	Exit		Exit
	Tv/Radio		TV/R
	A/B		Dual
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	EPG		Guide
	Info		Info
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	0		0				

