 





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play / Pause		Play / Slow
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	C		Subtitle / EQ
	Aspect		Picture / Format
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Quit		Back / Return
	Vol +		Vol+
	Liste		Smart / List
	P +		CH+ / Page+
	Vol -		Vol-
	P -		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/-





Originalfernbedienung   Ersatzfernbedienung

	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Play / Pause		Shift + Play /
	C		Shift + Subtitle / EQ
	Retour		Shift + Back / Return

Originalfernbedienung   Ersatzfernbedienung