



 

 

 

 

 

 

 

 

 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX		Text / Goto
	0		0
	FAV		Fav / Marker / PC
	Menu		Menu / Home
	Up / CH +		Up
	Up / CH +		CH+ / Page+



 



 

 

 



 

 

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Left / Vol -		Left
	Left / Vol -		Vol-
	OK		OK
	Right / Vol +		Right
	Right / Vol +		Vol+
	Sub-T		Subtitle / EQ
	Down / CH -		CH- / Page-
	Down / CH -		Down
	Info		Info / Angle
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Red / TV/R		Red / Netflix / Search
	Red / TV/R		TV/Radio /
	Green / Media		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Green / Media		Display / Media
	Yellow / Audio		Yellow / YouTube / Repeat
	Yellow / Audio		Audio / Lang I/II
	Blue		Blue / Prime Video / Random
	USB		Shift + 8
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

