 






 
 

 
 






 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	Vol +		Vol +
	Vol -		Vol -

Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Nicam		Dual
	Display		Info
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Menu		Menu
	Exit		Exit
	Input		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	Text		Text



