



 



 





 

 









 













Originalfernbedienung Ersatzfernbedienung

	Record		Rec / Rec Mode
	Standby		Power
	SV/V+		Display / Media
	Timer		Sleep / Timer
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	<<		<< / Tune-
	0		0
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Play		Play / Slow
	Left / Vol -		Vol-
	Left / Vol -		Left
	Up / P +		CH+ / Page+
	Up / P +		Up
	Right / Vol +		Vol+
	Right / Vol +		Right
	Down / P -		CH- / Page-
	Down / P -		Down
	Mute		Mute / Dimmer
	Menu		Menu / Home
	OK		OK
	>I / Index		Smart / List
	[X]		Back / Return
	Still		Pause / Step / Freeze
	Text		Text / Goto



