 

 

 

 

 

 

 

 
 
 


 


 


 
 

 

 



 

 


 
 
 
 
 
 

 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Audio I/II		Dual
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Recall		Back
	Exit		Exit
	Menu		Menu

**Originalfernbedienung    Ersatzfernbedienung**

	Source		AV
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P.Mode		Format
	S.Mode		Shift + Dual



