





 

 
 
 

 
 
 
 
 

 
 
 
 
 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	TV / Radio		TV/R
	TV Guide		Guide
	Mute		Mute
	ATV		Shift + Smart
	USB		Media
	DVD		Smart
	Eject		Eject
	Rec		Rec
	Rec List		Shift + Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<
	>>		>>
	Play / Pause		Play
	Play / Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Source / AV		AV
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



