









 














 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Sound		Sound / Title
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	CH. List		Smart / List
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	TV / Radio		TV/Radio /
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Info		Info / Angle
	Vol +		Vol+
	Rec		Rec / Rec Mode
	Rec. List		Display / Media



**Originalfernbedienung Ersatzfernbedienung**

	CH +		CH+ / Page+
	Vol -		Vol-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV / TXT		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Eject / Surround
	Nicam / A2		Audio / Lang I/II
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	<< / Size		<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	>> / Subpage		>> / Preset+
--	---------------	--	---------------

