



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		Vol-		Vol-
	1		1		OK		OK
	2		2		Down		Down
	3		3		P-		CH- / Page-
	4		4		i		Info / Angle
	5		5		CL		D.Menu / Top
	6		6		Mute		Mute / Dimmer
	7		7		TXT		Text / Goto
	8		8		Red		Red / Netflix / Search
	9		9		Rec		Rec / Rec Mode
	0		0		Green		Green / APP / Repeat
	AV		AV / Input / RDS		Timer		Sleep / Timer
	Up		Up		Yellow		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Picture		Picture / Format
	Right		Right		Blue		Blue / Prime Video / Random
	Vol+		Vol+		Sound		Sound / Title
	Left		Left		(I)-		Shift + CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	(l)+		Shift + CH+ /
	*-		I<< / Preset-
	*+		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Index + <<		Shift + << /
	Index + >		Shift + >> /
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

