



Originalfernbedienung Ersatzfernbedienung

|  |                    |   |           |
|--|--------------------|---|-----------|
|  | Power              |   | Power     |
|  | VCR                | + | Shift + 2 |
|  | DVD                | + | Shift + 1 |
|  | 1                  |   | 1         |
|  | 2                  |   | 2         |
|  | 3                  |   | 3         |
|  | 4                  |   | 4         |
|  | 5                  |   | 5         |
|  | 6                  |   | 6         |
|  | 7                  |   | 7         |
|  | 8                  |   | 8         |
|  | 9                  |   | 9         |
|  | 0                  |   | 0         |
|  | Input Select       |   | AV        |
|  | Display / CLK/CNT  |   | Info      |
|  | Open/Close / Eject |   | Eject     |
|  | TV / VCR           |   | TV/R      |

Originalfernbedienung Ersatzfernbedienung

|  |                      |   |               |
|--|----------------------|---|---------------|
|  | Clear / Count. Reset |   | Exit          |
|  | Blank Search         |   | Green         |
|  | Top Menu             | + | Shift + Menu  |
|  | Menu                 |   | Menu          |
|  | Return               |   | Back          |
|  | Zoom                 | + | Shift + Eject |
|  | Angle                |   | Format        |
|  | Subtitle             |   | Subt          |
|  | Audio                |   | Dual          |
|  | Instant Replay       | + | Shift + Play  |
|  | Play                 |   | Play          |
|  | << REW               |   | <<            |
|  | FWD >>               |   | >>            |
|  | Slow                 | + | Shift + Pause |
|  | Stop                 |   | Stop          |
|  | Pause Step / Still   |   | Pause         |
|  | I<< Skip             |   | I<<           |



