



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	HDTV		Red
	Movie		Green
	Music		Yellow
	Photo		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	16:9 / 4:3		Format

Originalfernbedienung Ersatzfernbedienung

	Zoom		Eject
	I<<		I<<
	>>I		>>I
	Up / Time Shift		Up
	Down		Down
	Right / >> / Sort		Right
	Right / >> / Sort		>>
	Left / << / Jump		Left
	Left / << / Jump		<<
	Play/Pause / OK		Ok
	Play/Pause / OK		Play
	Play/Pause / OK		Pause
	Vol +		Vol +
	Vol -		Vol -
	Stop / Return		Back
	Stop / Return		Stop
	TV CH +		Ch +





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			

