



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--













 

 

 







 







Originalfernbedienung    Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Green / >>		>> / Tune+
	Green / >>		Green / APP / Repeat
	Yellow / I<<		I<< / Preset-
	Yellow / I<<		Yellow / YouTube / Repeat
	Blue / >>		Blue / Prime Video / Random
	Blue / >>		>>  / Preset+
	Text / Play/Pause		Text / Goto
	Text / Play/Pause		Pause / Step / Freeze
	Text / Play/Pause		Play / Slow
	Text / Play/Pause		Stop / Hold
	Text / Play/Pause		Subtitle / EQ
	Text / Play/Pause		Zoom / Size
	Cancel [≡X]		Shift + Exit / Cancel / Clear
	Radio		TV/Radio /
	Audio / I/II		Audio / Lang I/II
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

**Originalfernbedienung    Ersatzfernbedienung**

	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green		Green / APP / Repeat				
	>>		>> / Tune+				
	Yellow		Yellow / YouTube / Repeat				
	I<<		I<< / Preset-				
	Blue		Blue / Prime Video / Random				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	[≡]		Text / Goto				
	Stop/Still		Stop / Hold				
	[≡+]		Picture / Format				
	[≡o]/Subtitle		Subtitle / EQ				
	[≡◆]/[+]		Zoom / Size				
	[≡x]		Setup / OPT /				
	Radio		TV/Radio /				
	Audio		Audio / Lang I/II				
	Rec		Rec / Rec Mode				

