

 

 

 

 

 
 
 
 
 

 

 

 
 



 




 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info
	Subtitle		Subt
	Mute		Mute
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right

Originalfernbedienung Ersatzfernbedienung

	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Record		Rec
	Stop		Stop
	Res		Format
	Goto		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	Media		Media
	USB		Smart
	TV / Radio		TV/R
	Audio		Dual
	TTX		Text
	Timer		AV
	FAV	 + 	Shift + Pre Ch
	Recall		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

