






 

 
 
 
 
 
 
 

 

 














 
 
 





Originalfernbedienung Ersatzfernbedienung



 



 



 

 

 


 
 
 

 

 
 


	Power		Power
	Source		AV
	Light		Media
	Text		Text
	[≡?]/SUB-T		Subt
	[≡o]/Audio		Dual
	[≡i]/EPG		Guide
	[≡x]/Sat.List		List
	[≡♦]/IPI		Format
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Rec		Rec
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	FAV		Pre Ch
	Setup		Options
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	P+		Ch +
	P-		Ch -
	Red/Radio		Red
	Green/Sleep		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Yellow/S/M/D	 Yellow		
 Blue/Res	 Blue		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 3D	 3D		
 Recall	 Back		

