



Originalfernbedienung	Ersatzfernbedienung
Power	Power
Level+	Vol +
Level-	Vol -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide
A-B Repeat	Options
Repeat	Text
Random	Media

Originalfernbedienung	Ersatzfernbedienung
Time Mode	Smart
Open/Close	Eject
<< Search	<<
Search >>	>>
I<< Skip	I<<
Skip >>I	>>I
Pause	Pause
Play	Play
Stop	Stop

