 



 
 


 

 

 
 

 
 
 

 


 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SUB-T		Subt
	Lang		Dual
	Mute		Mute
	EPG		Guide
	Goto		Smart
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	TTX		Text
	Repeat		Shift + Text
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right

Originalfernbedienung Ersatzfernbedienung

	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	FAV		Pre Ch
	TV / Radio		TV/R
	Recall		Back
	Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





## Originalfernbedienung Ersatzfernbedienung

	0		0
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Play		Play
	Pause / Timeshift		Pause
	Stop		Stop
	Rec		Rec
	Red / PVR		Red
	Green / V-Format		Green
	Green / V-Format		Format
	Yellow / Aspect		Yellow
	Yellow / Aspect		3D
	Blue / Timer		Blue

## Originalfernbedienung Ersatzfernbedienung

 
 


 

 

 

 

 
 
 

 

 

 

 

 

 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	EPG		Guide
	Info		Info
	Audio		Dual
	Recall		Back
	Subtitle		Subt
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	FAV		Pre Ch
	TV / Radio		TV/R
	Text		Text
	Goto		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	USB		Media
	Rec		Rec





Originalfernbedienung    Ersatzfernbedienung      Originalfernbedienung    Ersatzfernbedienung

	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	---		+ <b>1</b> Shift + 1
	---		+ <b>2</b> Shift + 2
	---		+ <b>3</b> Shift + 3
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue