

 

 
 

 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------|
|  | Power |  | Power |
|  | 16:9 Wide |  | Format |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | F1 |  | Shift + 1 |
|  | Guide |  | Smart |
|  | Smart S |  | Dual |
|  | Smart P |  | Options |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | Menu |  | Menu |
|  | Source |  | AV |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | Info |  | Info |
|  | Sleep |  | Sleep |
|  | Recall |  | Back |
|  | L / R |  | Shift + Dual |
|  | Play / Index |  | Play |
|  | Pause / Zoom |  | Pause |





| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
| Pause / Zoom | Eject |
| Stop / Reveal | Stop |
| TTX | Text |
| I<< / Hold | I<< |
| >>I / List | >>I |
| << / Language | << |
| >> / Radio | >> |
| >> / Radio | TV/R |
| Red / Rec | Red |
| Red / Rec | Rec |
| >>I / List | List |
| Green / Subtitle | Green |
| Green / Subtitle | Subt |
| Yellow / FAV | Yellow |
| Yellow / FAV | Pre Ch |
| Blue / EPG | Blue |
| Blue / EPG | Guide |

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

