 





 

 


 






 

 

 



 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Eject		Eject / Surround
	Tv/VCR		TV/Radio /
	Mute		Mute / Dimmer
	i/Menu		Menu / Home
	Up		Up
	Prog Up		CH+ / Page+
	AV		AV / Input / RDS
	Left		Left
	Vol-		Vol-
	OK/CLK/CNT		OK
	Right		Right
	Vol+		Vol+
	Clear		Exit / Cancel / Clear
	Down		Down
	Prog Down		CH- / Page-
	CM Skip		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	LP		Smart / List
	Stop		Stop / Hold
	P/Still		Pause / Step / Freeze
	Rec/ITR		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	1		1
	2		2
	3		3
	eZ Power Off		Red / Netflix / Search
	4		4
	5		5
	6		6
	eZ Repeat		Green / APP / Repeat
	7		7
	8		8





Originalfernbedienung   Ersatzfernbedienung



 











	9		9
	0		0
	C.Lock		Display / Media

Originalfernbedienung   Ersatzfernbedienung






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Tv AV		AV / Input / RDS
	Prog Up		CH+ / Page+
	Prog Down		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-

**Originalfernbedienung Ersatzfernbedienung**