



 

 

 


 



 


 

 
 

 
 
 
 
 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | 10+ |  | Shift + Guide |
|  | SUBTL |  | Subt |
|  | EPG |  | Guide |
|  | Menu |  | Menu |
|  | Vol + |  | Vol + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|---------------|
|  | Vol - |  | Vol - |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | Exit |  | Exit |
|  | Red / USB Left |  | Red |
|  | Red / USB Left |  | Shift + Left |
|  | Green / USB |  | Green |
|  | Green / USB |  | Shift + Down |
|  | Yellow / USB Up |  | Yellow |
|  | Yellow / USB Up |  | Shift + Up |
|  | Blue / USB Right |  | Blue |
|  | Blue / USB Right |  | Shift + Right |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |





Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|--------------------|--|----------------|
| | QV | | Options |
| | FAV | | Pre Ch |
| | Source | | AV |
| | Sleep | | Sleep |
| | Picture | | Shift + Format |
| | Sound | | Shift + Dual |
| | Display | | Info |
| | I/II / Top | | Dual |
| | FAV - / REV | | << |
| | FAV + / FWD | | >> |
| | USR/CR / Text | | Media |
| | USR/CR / Text | | Text |
| | Play/Pause / Index | | Play |
| | Play/Pause / Index | | Shift + Info |
| | Play/Pause / Index | | Pause |
| | Stop / Cancel | | Stop |
| | Stop / Cancel | | Shift + Exit |


 
 
 
 

 


Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|-----------------|--|---------------|
| | Size | | Format |
| | Prog / Mix | | Smart |
| | Prog / Mix | | Shift + Sleep |
| | Return / SUBPG | | Back |
| | Repeat / Reveal | | Shift + Back |
| | Search / Hold | | TV/R |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 

 

 


 
 
 

 









Originalfernbedienung Ersatzfernbedienung

| | | |
|--|---|---------|
| |  | Power |
| |  | AV |
| |  | Exit |
| |  | Menu |
| |  | Dual |
| |  | Media |
| |  | Options |
| |  | Text |
| |  | TV/R |
| |  | 1 |
| |  | 2 |
| |  | 3 |
| |  | 6 |
| |  | 5 |
| |  | 4 |
| |  | 7 |
| |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | |
|--|---|---------------|
| |  | 9 |
| |  | 0 |
| |  | Guide |
| |  | Up |
| |  | Right |
| |  | Ok |
| |  | Left |
| |  | Down |
| |  | Subt |
| |  | Pause |
| |  | Rec |
| |  | << |
| |  | Play |
| |  | >> |
| |  | Shift + Media |
| |  | Shift + Dual |
| |  | Shift + 6 |

