



 
 
 


 

 
 

 
 
 






Originalfernbedienung Ersatzfernbedienung

 
 


	Standby/On		Power
	Tv/Video		TV/R
	Output Select		AV
	DV		Green
	HDD		Yellow
	DVD		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Exit

Originalfernbedienung Ersatzfernbedienung





	Memo/Mark		Pre Ch
	PR/CH+		Ch +
	PR/CH-		Ch -
	F1		Shift + 1
	F2		Shift + 2
	Edit		Guide
	Prog		Sleep
	Top Menu		Shift + Menu
	Navigation		List
	Menu		Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<<		I<<




Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<</Slow-		<<
	Play		Play
	>>/Slow+		>>
	Rec		Rec
	Stop/Clear		Stop
	Pause		Pause
	Display		Info
	On Screen		3D
	←		Media
	→		Smart
	Rec		Format
	Audio		Dual
	Subtitle		Subt
	Angle/EE Check		Red
	EE		Eject
	Dubbing		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Progressive Scan		Text
	Set Up		Options





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Standby/On		Power
	Tv/Video		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Back
	Vol+		Vol +
	Vol-		Vol -
	PR/CH+		Ch +
			Ch -
	Input Select		AV
	F1		Smart

