 

 
 

 








 

 

 





 
 


 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Input		AV
	Sound		Dual
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	i		Info
	Back		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	P +		Ch +
	P -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Index		Shift + Info



