


 



 
 
 
 
 
 
 



 




 



 


 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power TV		Power
	Power STB		Shift + Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	CH.List		List
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Smart Hub		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Back/Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 D	 Dual		
 Status	 TV/R		
 More	 3D		
 E-Manual	 D. Menu		
 Recommend	 Format		
 AD/Subt	 Subt		
 <<	 <<		
 I<<	 I<<		
 Pause	 Pause		
 >>	 >>		
 >>I	 >>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

