

















 


 






Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Vol +		Vol+
	Aspect		Shift + Picture / Format
	Nicam		Audio / Lang I/II

Originalfernbedienung    Ersatzfernbedienung

	CH +		CH+ / Page+
	Vol -		Vol-
	Input		AV / Input / RDS
	CH -		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	PMode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	FAV		Fav / Marker / PC
	FAV -		Shift + Down



 











Originalfernbedienung Ersatzfernbedienung

	FAV +	 + 	Shift + Up
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	Hold	 + 	Shift + Stop /
	Lang	 + 	Shift + Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Index / <<<		<<< / Tune-
	Index / <<<		Info / Angle
	Size / >>>		>>> / Tune+
	Size / >>>		Zoom / Size
	Reveal /  <<<		<<< / Preset-
	Subpage / >>>		>>>  / Preset+
	Subpage / >>>		Eject / Surround
	Rec		Rec / Rec Mode
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Media	 + 	Shift + Display / Media
	Red / TV/Radio		TV/Radio /
	Red / TV/Radio		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

