




















 






 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Vol +		Vol+
	Aspect		Shift + Picture / Format
	Nicam		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	CH +		CH+ / Page+
	Vol -		Vol-
	Input		AV / Input / RDS
	CH -		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	PMode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	FAV		Fav / Marker / PC
	FAV -		Shift + Down



