 




 

 





 




 

 

 


 




 
 


 
 



 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Sleep		Sleep
	Freeze	 + 	Shift + Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Menu		Menu
	DTV		Smart

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Zoom		Eject
	Recall		Back
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	P.Mode		Format
	S.Mode		Dual
	Nicam	 + 	Shift + Dual
	FAV		Pre Ch



