



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	HDD		Shift + 7
	0		0
	Timer		Sleep / Timer
	DVD		Shift + 2
	Up		Up
	Setup		Setup / OPT /
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Select		Shift + OK
	Down		Down
	[i+]		Info / Angle
	Stop		Stop / Hold
	Play		Play / Slow
	Rec		Rec / Rec Mode
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Return		Shift + Back / Return
	>>I		>>I / Preset+
	Back Jump		Back / Return
	Clear		Exit / Cancel / Clear
	Edit		Shift + Setup / OPT / Tools
	FWD Jump		>> / Tune+
	DV		AV / Input / RDS



