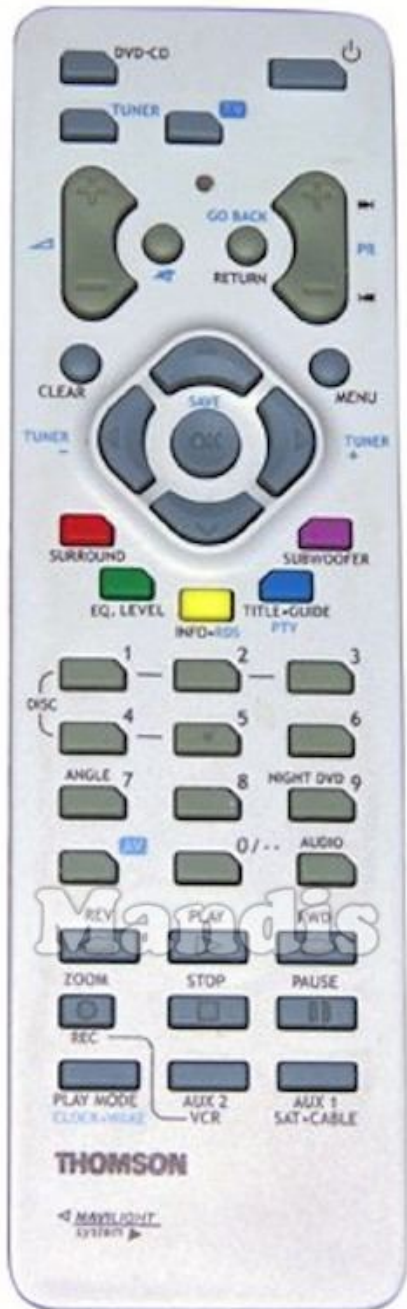

**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Menu		Menu
	1 / Disc 1		1
	2 / Disc 2		2
	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7 / Angle		7
	8		8
	9 / Night DVD		9
	0 / --		0
	Aux 1 / SAT /		AV
	Aux 2 / VCR		Shift + AV
	Tuner		Shift + TV/R
	TV		TV/R

**Originalfernbedienung Ersatzfernbedienung**

	DVD / CD		Media
	Vol +		Vol +
	Vol -		Vol -
	>>I		>>I
	I<<		I<<
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK / Save		Ok
	Return		Back
	Clear / Sleep		Sleep
	Play Mode		Shift + Play
	Pause		Pause
	Stop		Stop
	Rec / Zoom		Rec
	<< REV		<<




**Originalfernbedienung    Ersatzfernbedienung**

	Play		Play
	>> FWD		>>
	Audio		Dual
	PR +		Ch +
	PR -		Ch -
	Tuner -		Shift + Left
	Tuner +		Shift + Right
	Purple /		Pre Ch
	Red / Surround		Red
	Green / EQ Level		Green
	Yellow / Info		Yellow
	Blue / Title/Guide		Blue
	Yellow / Info		Info
	Blue / Title/Guide		Guide

**Originalfernbedienung    Ersatzfernbedienung**