



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Goto		Smart
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Zoom+		Ch +
	Zoom-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	<</REV		<<
	>>/FWD		>>
	<</Prev		<<
	>>/Next		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Step		Pre Ch
	Menu		Menu
	Title		Info
	Setup		Options
	PBC		Yellow
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	OSD		List
	Angle		AV
	Subtitle		Subt
	Video		TV/R
	A-B		Media
	Prog		Sleep
	Return		Back
	Repeat		Text
	Slow		Format
	Audio		Dual
	N/P		3D
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

